ARAT Telephone mount

Type: Range Rover
Model 2002 onwards

Part No: 1238.1

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

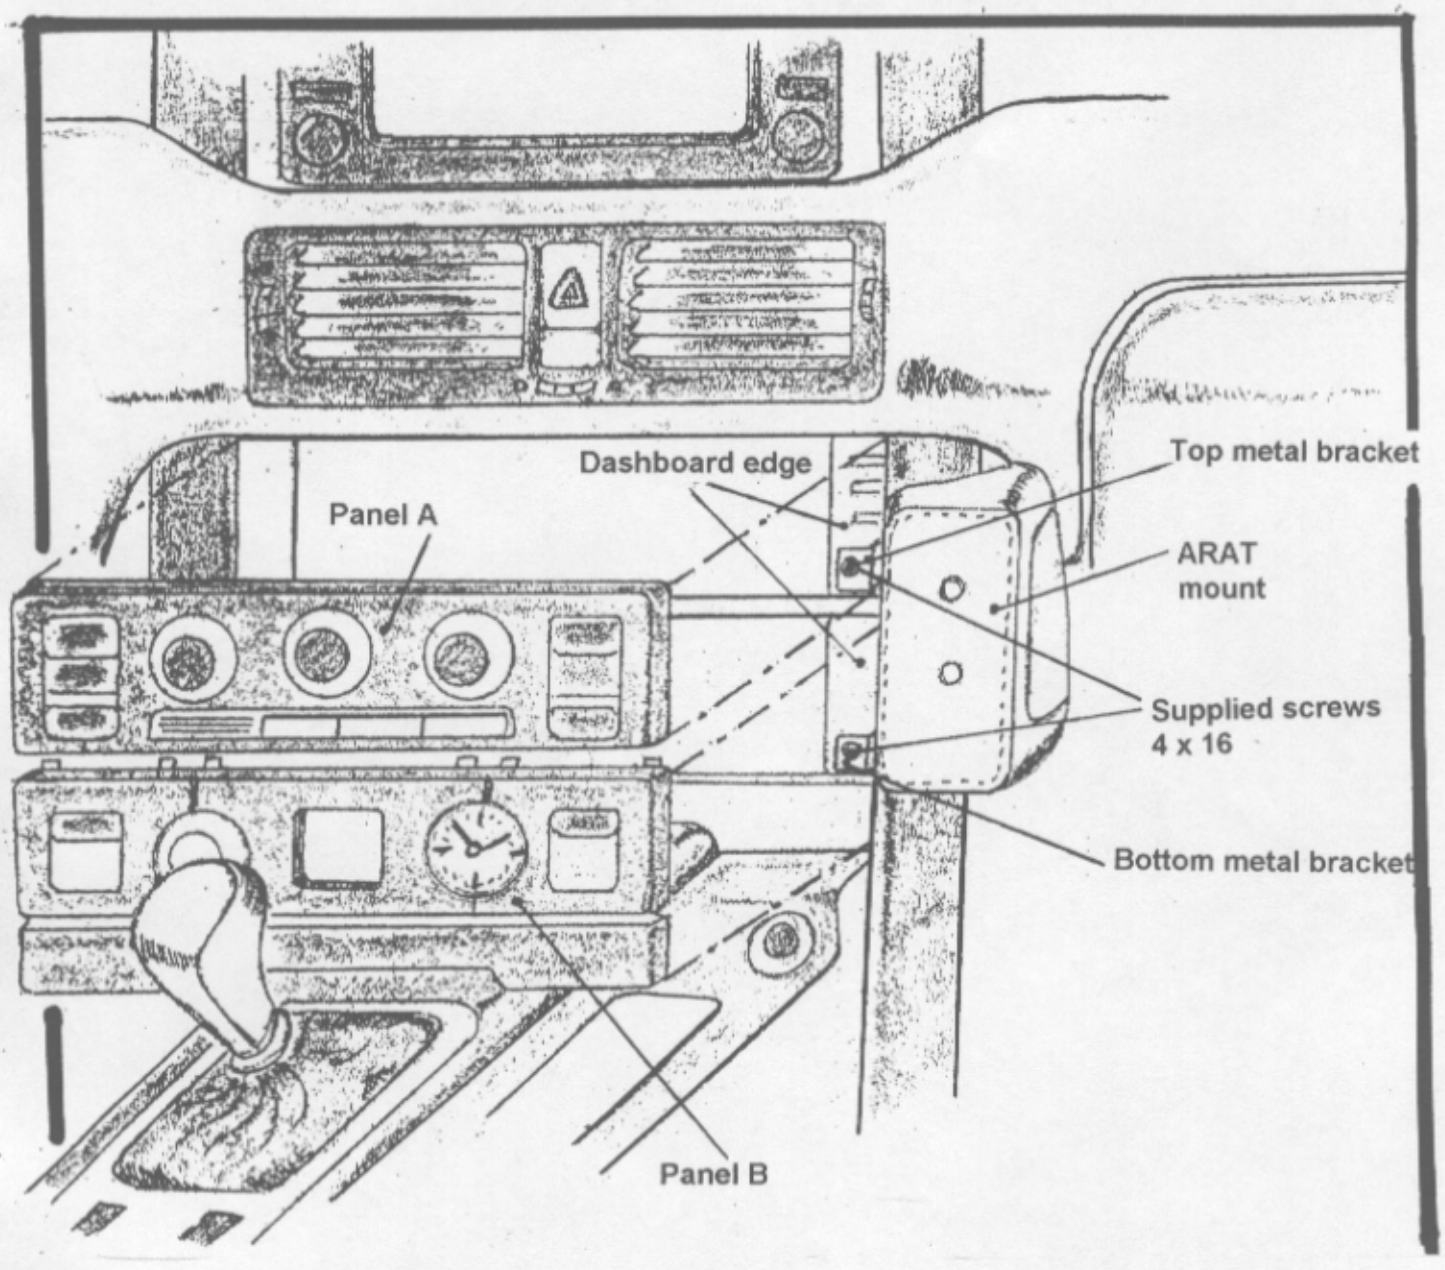

Installation instruction

1. Remove / Prise off, the panels A + B from their spring clips (suggested tool, plastic prising tool)
2. Place the ARAT mount to the contours of the dashboard, and secure the mount with the supplied screws (4 x 16) through the metal brackets into the dashbaord edge
3. Replace the front panels A + B